




## EF20 Metallic Pumps

- Aluminum
- Cast Iron
- Stainless Steel

### Assembly, Installation and Operation Manual

#### ***Design Level 1***

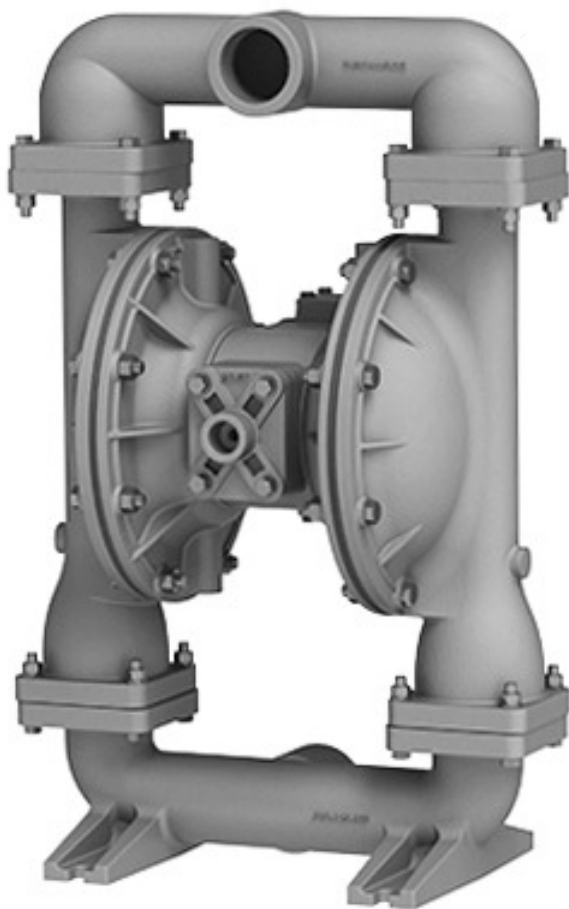

Ex II 2G c T5

Ex II 2D c T100°C

Ex II 2 G Ex h IIB T4...T3 Gb

**UK  
CA**

## Enviroflex Ltd

Pump Point, 21 Ascot Drive, DERBY, DE24 8GZ, United Kingdom  
[www.enviroflexpumps.com](http://www.enviroflexpumps.com)

# Safety Information

## ⚠ IMPORTANT



*Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory.*



*When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.*

## ⚠ CAUTION



*Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.*



*Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.*

## ⚠ WARNING



*When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.*



*Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.*



*Airborne particles and loud noise hazards. Wear eye and ear protection.*



*In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.*



*Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.*



*This pump is pressurized internally with air pressure during operation. Make certain that all fasteners and piping connections are in good condition and are reinstalled properly during reassembly.*



*Use safe practices when lifting*

# Explanation of Pump Nomenclature

Your Model #: **EF**

(fill in from pump nameplate)

Pump Brand	Pump Size	Design Level	Wetted Material	Non-Wetted Material	Diaphragm/Check Valve	Check Valve Seat	Porting Options	Muffler Options
------------	-----------	--------------	-----------------	---------------------	-----------------------	------------------	-----------------	-----------------

Model #: **EF XX XX X X X X X X**

## Pump Brand

**EF** Enviroflex Pumps

## Diaphragm/Check Valve Materials

- 1** Santoprene/Santoprene
- 2** PTFE-Santoprene/PTFE
- 3** Neoprene/Santoprene
- 4** Hytrel/Santoprene
- 6** Hytrel/Neoprene
- B** Nitrile/Nitrile
- C** Viton/PTFE
- E** EPDM/EPDM
- G** PTFE-Neoprene/PTFE
- H** Hytrel/Hytrel
- I** EPDM/Santoprene
- M** Santoprene/PTFE
- N** Neoprene/Neoprene

## Check Valve Seat

- 1** Santoprene
- 4** Hytrel
- A** Aluminum
- B** Nitrile
- E** EPDM
- N** Neoprene
- S** Stainless Steel
- T** PTFE
- V** FKM
- W** UHMW Polyethylene

## Pump Size

**20** 2"

## Design Level

**01** Design Level

## Wetted Material

- A** Aluminum
- I** Cast Iron
- S** Stainless Steel

## Non-Wetted Material Options

- A** Aluminum

## Porting Options

- N** NPT Threads
- B** BSPT Threads
- R** Threaded Flange
- W** Welded Flange

## Muffler Options

- 0** Standard Muffler
- 6** Metal Muffler
- X** No Muffler

Record the model number and serial number below for future reference. This is important information when ordering replacement parts or when technical assistance is required.


Your Pump Model #: \_\_\_\_\_

Your Serial #: \_\_\_\_\_

# Performance

## EF20 METALLIC

Model EF20 Metallic Performance Curve

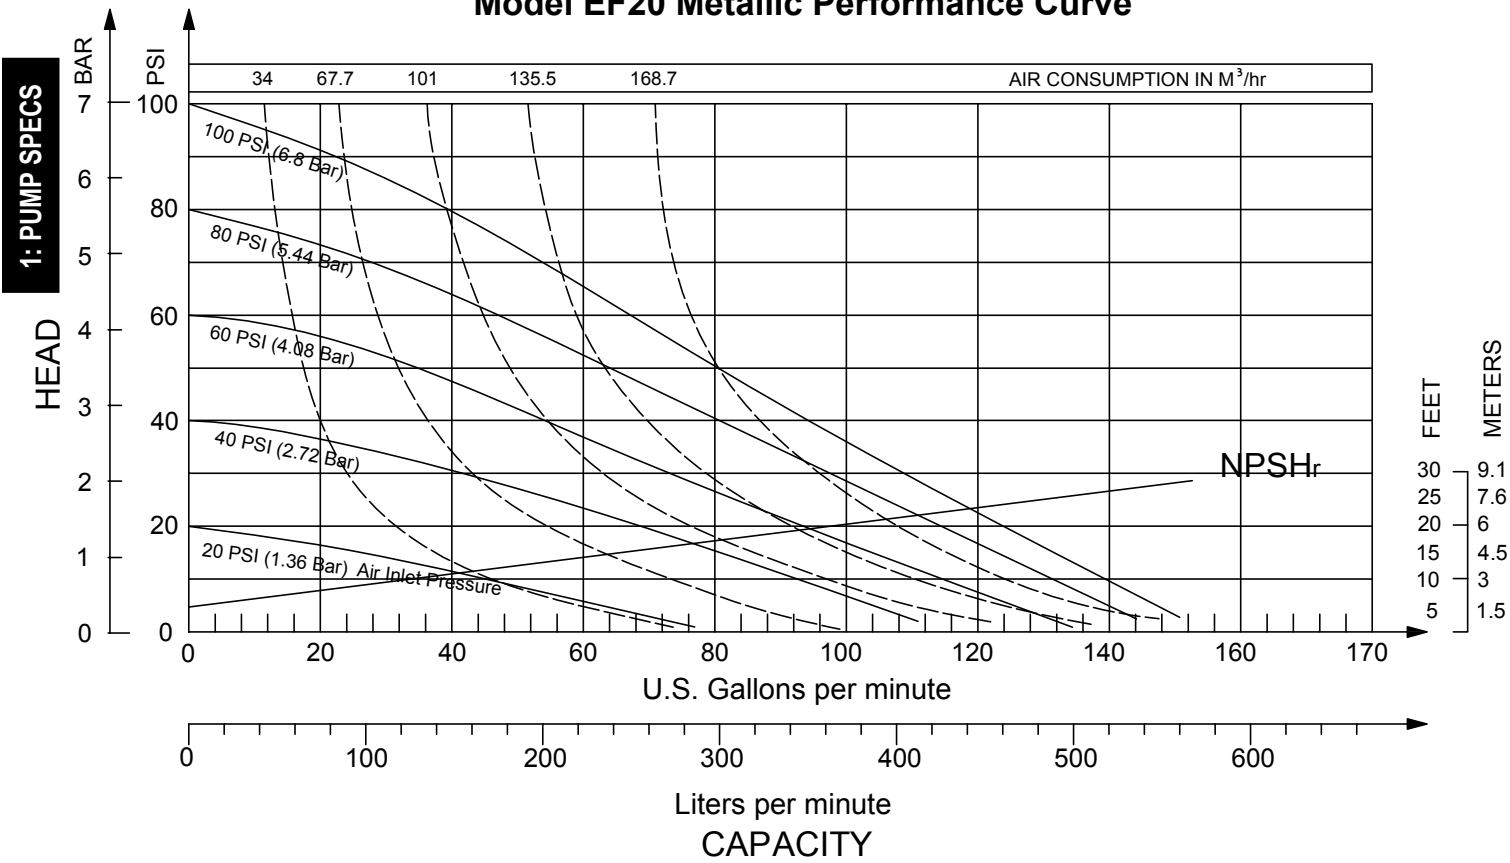

### SUCTION/DISCHARGE PORT SIZE

- 2" NPT (internal)
- 2" BSPT (internal)
- 2" Flange

### CAPACITY

- 0 to 151 gallons per minute  
(0 to 571 liters per minute)

### AIR DISTRIBUTION VALVE

- No-lube, no-stall design

### SOLIDS-HANDLING

- Up to 0.25 in. (6mm)

### HEADS UP TO

- 125 psi or 289 ft. of water  
(8.6 bar or 86 meters)

### DISPLACEMENT/STROKE

- 0.42 Gallon / 1.59 liter

### MAX OPERATING PRESSURE

- 125 psi (8.6 bar)

### SHIPPING WEIGHT

- Aluminum 73.8 lbs. (33.5kg)
- Cast Iron 134.5 lbs. (61kg)
- Stainless Steel 123.5 lbs. (56kg)

# Materials

Material Profile:	Operating Temperatures:	
	Max.	Min.
<b>⚠ CAUTION! Operating temperature limitations are as follows:</b>		
<b>Conductive Acetal:</b> Tough, impact resistant, ductile. Good abrasion resistance and low friction surface. Generally inert, with good chemical resistance except for strong acids and oxidizing agents.	190°F 88°C	-20°F -29°C
<b>EPDM:</b> Shows very good water and chemical resistance. Has poor resistance to oils and solvents, but is fair in ketones and alcohols.	280°F 138°C	-40°F -40°C
<b>FKM:</b> (Fluorocarbon) Shows good resistance to a wide range of oils and solvents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils. Hot water or hot aqueous solutions (over 70°F(21°C)) will attack FKM.	350°F 177°C	-40°F -40°C
<b>Hytre:</b> Good on acids, bases, amines and glycols at room temperatures only.	220°F 104°C	-20°F -29°C
<b>Neoprene:</b> All purpose. Resistance to vegetable oils. Generally not affected by moderate chemicals, fats, greases and many oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters and nitro hydrocarbons and chlorinated aromatic hydrocarbons.	200°F 93°C	-10°F -23°C
<b>Nitrile:</b> General purpose, oil-resistant. Shows good solvent, oil, water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated hydrocarbons and nitro hydrocarbons.	190°F 88°C	-10°F -23°C
<b>Nylon:</b> 6/6 High strength and toughness over a wide temperature range. Moderate to good resistance to fuels, oils and chemicals.	180°F 82°C	32°F 0°C
<b>Polypropylene:</b> A thermoplastic polymer. Moderate tensile and flex strength. Resists strong acids and alkali. Attacked by chlorine, fuming nitric acid and other strong oxidizing agents.	180°F 82°C	32°F 0°C
<b>PVDF:</b> (Polyvinylidene Fluoride) A durable fluoroplastic with excellent chemical resistance. Excellent for UV applications. High tensile strength and impact resistance.	250°F 121°C	0°F -18°C
<b>Santoprene:</b> Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance.	275°F 135°C	-40°F -40°C
<b>UHMW PE:</b> A thermoplastic that is highly resistant to a broad range of chemicals. Exhibits outstanding abrasion and impact resistance, along with environmental stress-cracking resistance.	180°F 82°C	-35°F -37°C
<b>Urethane:</b> Shows good resistance to abrasives. Has poor resistance to most solvents and oils.	150°F 66°C	32°F 0°C
<b>Virgin PTFE:</b> (PFA/TFE) Chemically inert, virtually impervious. Very few chemicals are known to chemically react with PTFE; molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures.	220°F 104°C	-35°F -37°C
<i>Maximum and Minimum Temperatures are the limits for which these materials can be operated. Temperatures coupled with pressure affect the longevity of diaphragm pump components. Maximum life should not be expected at the extreme limits of the temperature ranges.</i>		
<b>Metals:</b>		
<b>Alloy C:</b> Equal to ASTM494 CW-12M-1 specification for nickel and nickel alloy.		
<b>Stainless Steel:</b> Equal to or exceeding ASTM specification A743 CF-8M for corrosion resistant iron chromium, iron chromium nickel and nickel based alloy castings for general applications. Commonly referred to as 316 Stainless Steel in the pump industry.		
For specific applications, always consult the Chemical Resistance Chart.		


**Ambient temperature range:** -20°C to +40°C

**Process temperature range:** -20°C to +80°C for models rated as category 1 equipment  
-20°C to +100°C for models rated as category 2 equipment

In addition, the ambient temperature range and the process temperature range do not exceed the operating temperature range of the applied non-metallic parts as listed in the manuals of the pumps.

## Dimensional Drawings for EF20 Metallic Pumps

1: PUMP SPECS

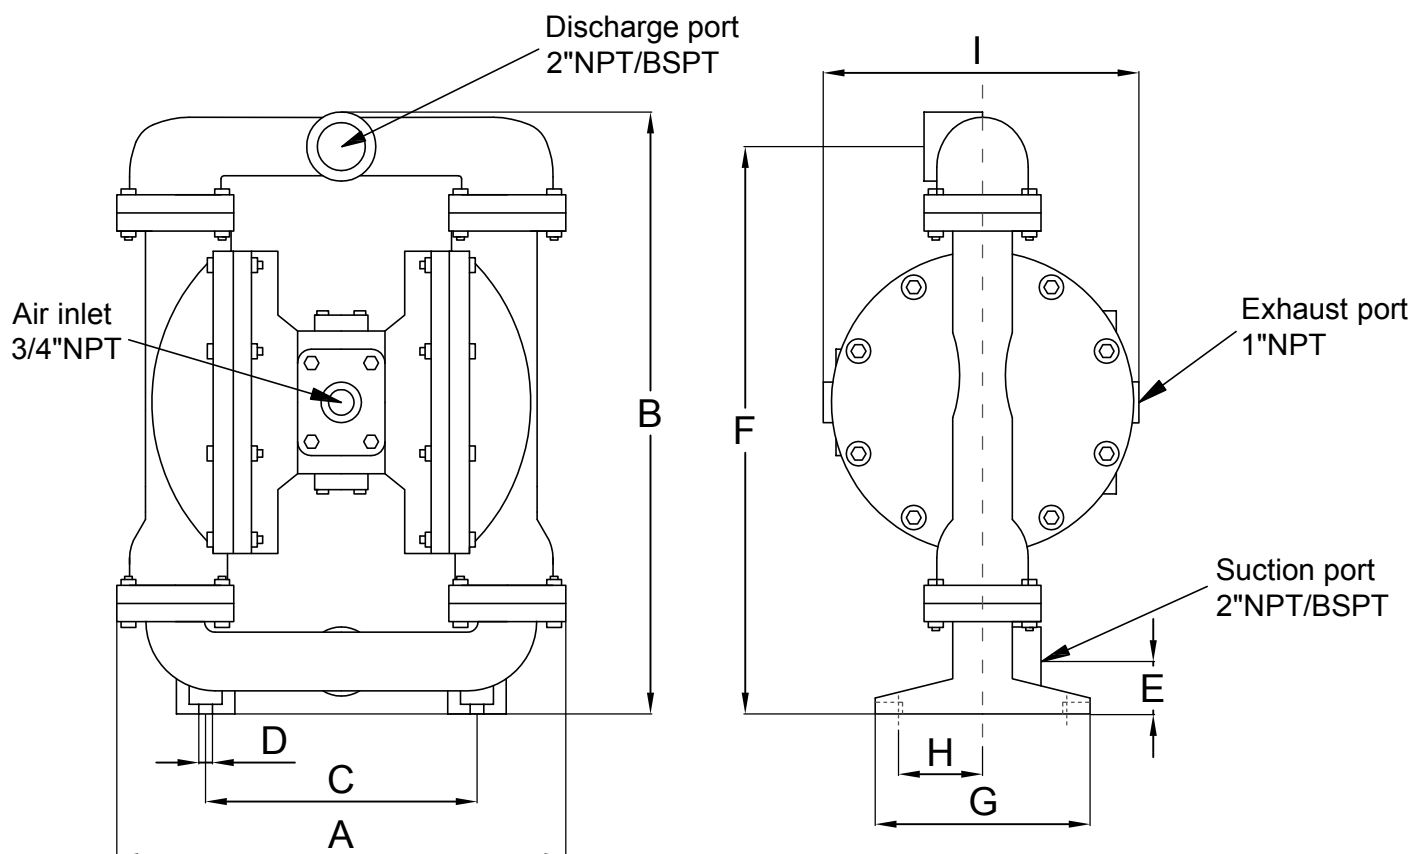

**Dimension Tolerance : $\pm 5$ mm or  $\pm 0.2$ "**

Pump Model	A	B	C	D	E	F	G	H	I mm/inches		Weight (kg)
	mm inches	mm inches	mm inches	mm inches	mm inches	mm inches	mm inches	mm inches	standard muffler	metal muffler	
EF20M	428 16.85"	669 26.34"	256 10.08" (AL,CI)	13 0.51"	51 2.01"	631 24.84"	254 10"	114 4.49"	320 12.6"	373 14.69"	AL:33.5 CI:61 SS:56
			250 9.84" (SS)								

# Troubleshooting Guide

Symptom:	Potential Cause(s):	Recommendation(s):
<b>Pump Cycles Once</b>	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Air valve or intermediate gaskets installed incorrectly.	Install gaskets with holes properly aligned.
	Bent or missing actuator plunger.	Remove pilot valve and inspect actuator plungers.
<b>Pump Will Not Operate / Cycle</b>	Pump is over lubricated.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
	Lack of air (line size, PSI, CFM).	Check the air line size and length, compressor capacity (HP vs. CFM required).
	Check air distribution system.	Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators.
	Discharge line is blocked or clogged manifolds.	Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Blocked air exhaust muffler.	Remove muffler screen, clean or de-ice, and re-install.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
<b>Pump Cycles and Will Not Prime or No Flow</b>	Pump chamber is blocked.	Disassemble and inspect wetted chambers. Remove or flush any obstructions.
	Cavitation on suction side.	Check suction condition (move pump closer to product).
	Check valve obstructed. Valve ball(s) not seating properly or sticking.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material.
	Valve ball(s) missing (pushed into chamber or manifold).	Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility.
	Valve ball(s) / seat(s) damaged or attacked by product.	Check Chemical Resistance Guide for compatibility.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
<b>Pump Cycles Running Sluggish / Stalling, Flow Unsatisfactory</b>	Over lubrication.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
	Icing.	Remove muffler screen, de-ice, and re-install. Install a point of use air drier.
	Clogged manifolds.	Clean manifolds to allow proper air flow.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Cavitation on suction side.	Check suction (move pump closer to product).
	Lack of air (line size, PSI, CFM).	Check the air line size, length, compressor capacity.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Air supply pressure or volume exceeds system hd.	Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling.
	Undersized suction line.	Meet or exceed pump connections.
	Restrictive or undersized air line.	Install a larger air line and connection.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous.
	Diaphragm failure, or diaphragm plates loose.	Replace diaphragms, check for damage and ensure diaphragm plates are tight.
	Diaphragm stretched around center hole or bolt holes.	Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
<b>Premature Diaphragm Failure</b>	Cavitation.	Enlarge pipe diameter on suction side of pump.
	Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener.
	Misapplication (chemical/physical incompatibility).	Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
	Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn.	Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge.
<b>Unbalanced Cycling</b>	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Undersized suction line.	Meet or exceed pump connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
<b>Product Leaking Through Exhaust</b>	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs.

# Diaphragm Servicing

**Step 1:** With manifolds and outer chambers removed, remove diaphragm assemblies from diaphragm rod. **DO NOT** use a pipe wrench or similar tool to remove assembly from rod. Flaws in the rod surface may damage bearings and seal. Soft jaws in a vise are recommended to prevent diaphragm rod damage.

**Step 1.A: NOTE:** Not all inner diaphragm plates are threaded. Some models utilize a through hole in the inner diaphragm plate. If required to separate diaphragm assembly, place assembly in a vise, gripping on the exterior cast diameter of the inner plate. Turn the outer plate clockwise to separate the assembly.

Always inspect diaphragms for wear cracks or chemical attack. Inspect inner and outer plates for deformities, rust scale and wear. Inspect intermediate bearings for elongation and wear. Inspect diaphragm rod for wear or marks.

Clean or repair if appropriate. Replace as required.

**Step 2:** Reassembly: There are two different types of diaphragm plate assemblies utilized throughout the Enviroflex Pumps product line: Outer plate with a threaded stud, diaphragm, and a threaded inner plate.

Outer plate with a threaded stud, diaphragm, and an inner plate with through hole. Secure threaded inner plate in a vise. Ensure that the plates are being installed with the outer radius against the diaphragm.

**Step 3:** Lightly lubricate, with a compatible material, the inner faces of both outer and inner diaphragm plates when using on non Overlay diaphragms (For EPDM water is recommended). No lubrication is required.

**Step 4:** Push the threaded outer diaphragm plate through the center hole of the diaphragm. **Note:** Most diaphragms are installed with the natural bulge out towards the fluid side. 05, 07, and 10 non-metallic units are installed with the natural bulge in towards the air side.

**Step 5:** Thread or place, outer plate stud into the inner plate. For threaded inner plates, use a torque wrench to tighten the assembly together. Torque values are called out on the exploded view.

Repeat procedure for second side assembly. Allow a minimum of 15 minutes to elapse after torquing, then re-torque the assembly to compensate for stress relaxation in the clamped assembly.

**Step 6:** Thread one assembly onto the diaphragm rod with sealing washer (when used) and bumper.

**Step 7:** Install diaphragm rod assembly into pump and secure by installing the outer chamber in place and tightening the capscrews.

**Step 8:** On opposite side of pump, thread the remaining assembly onto the diaphragm rod. Using a torque wrench, tighten the assembly to the diaphragm rod. Align diaphragm through bolt holes, always going forward past the recommended torque. Torque values are called out on the exploded view. **NEVER** reverse to align holes, if alignment cannot be achieved without damage to diaphragm, loosen complete assemblies, rotate diaphragm and reassemble as described above.

**Step 9:** Complete assembly of entire unit. One Piece Diaphragm Servicing (Bonded PTFE with integral plate) The One Piece diaphragm has a threaded stud installed in the integral plate at the factory. The inner diaphragm plate has a through hole instead of a threaded hole. Place the inner plate over the diaphragm stud and thread the first diaphragm / inner plate onto the diaphragm rod only until the inner plate contacts the rod. Do not tighten. A small amount of grease may be applied between the inner plate and the diaphragm to facilitate assembly. Insert the diaphragm / rod assembly into the pump and install the outer chamber. Turn the pump over and thread the second diaphragm / inner plate onto the diaphragm rod. Turn the diaphragm until the inner plate contacts the rod and hand tighten the assembly. Continue tightening until the bolt holes align with the inner chamber holes. **DO NOT LEAVE THE ASSEMBLY LOOSE**




## IMPORTANT



*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory.*

# Recommended Installation Guide

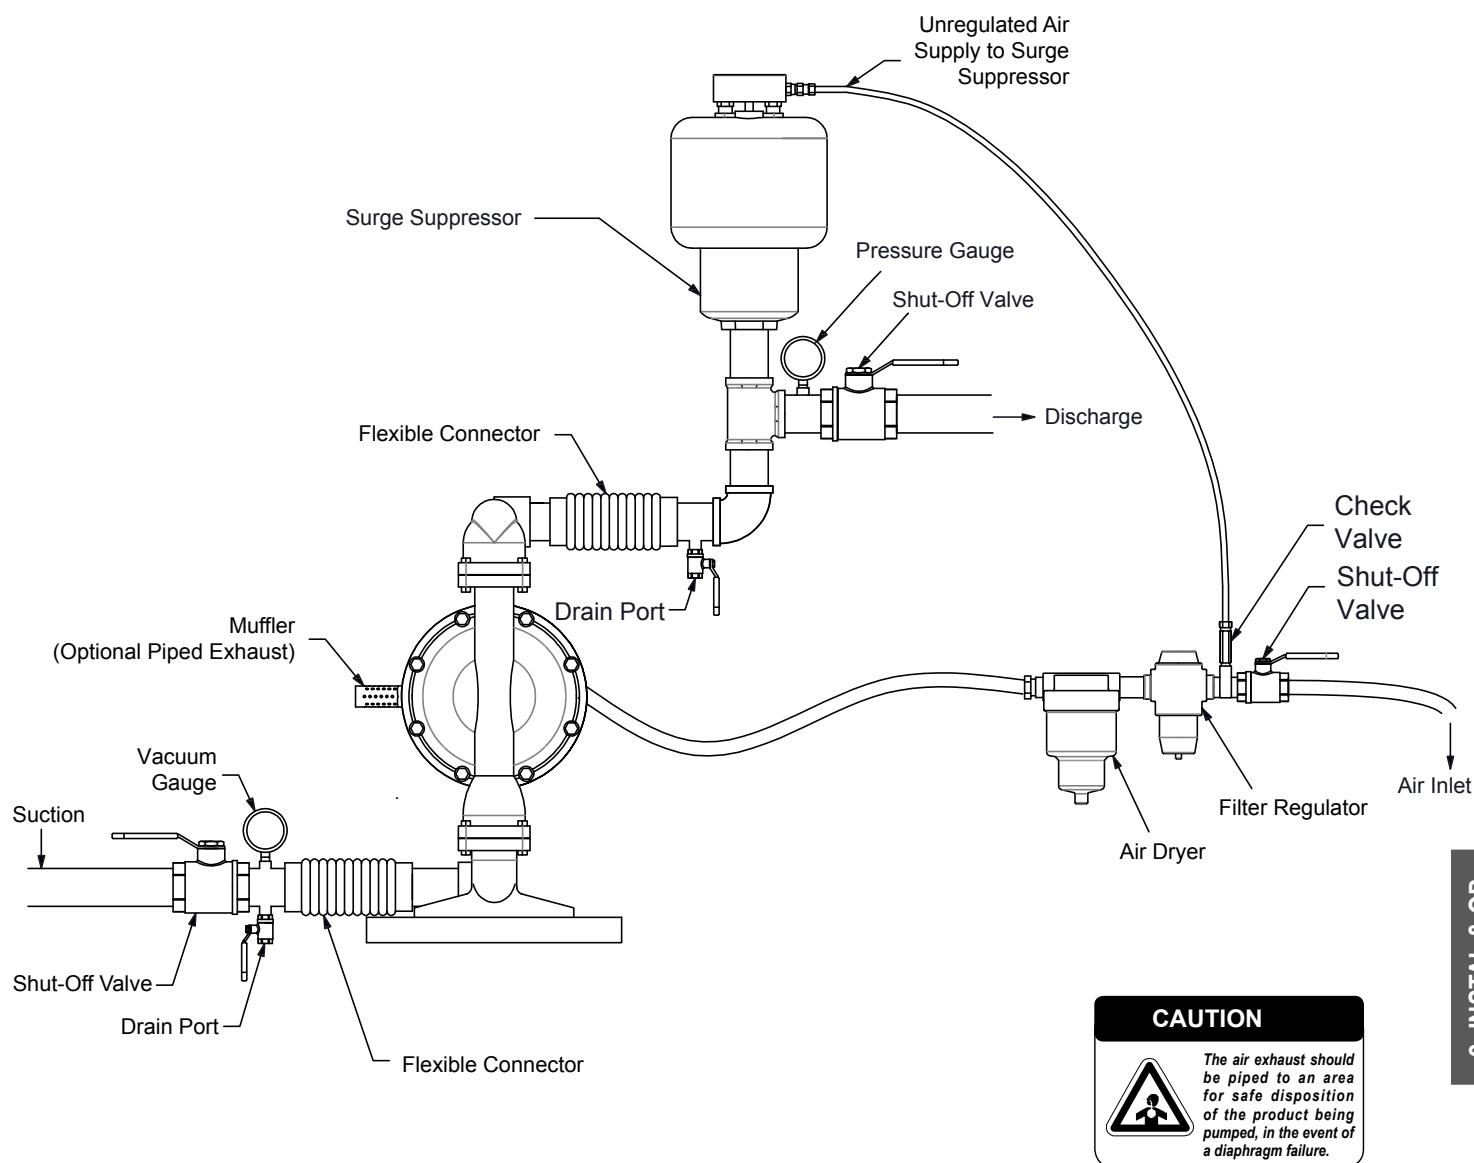

2: INSTAL & OP

## Installation And Start-Up

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

## Air Supply

Connect the pump air inlet to an air supply with sufficient capacity and pressure to achieve desired performance. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

## Air Valve Lubrication

The air distribution system is designed to operate WITHOUT lubrication. This is the standard mode of operation. If lubrication is desired, install an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes. Consult the Performance Curve to determine air consumption.


## Air Line Moisture

Water in the compressed air supply may cause icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer.



## Air Inlet And Priming

To start the pump, slightly open the air shut-off valve. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.

# EXPLODED VIEWS FOR EF20 METALLIC PUMPS

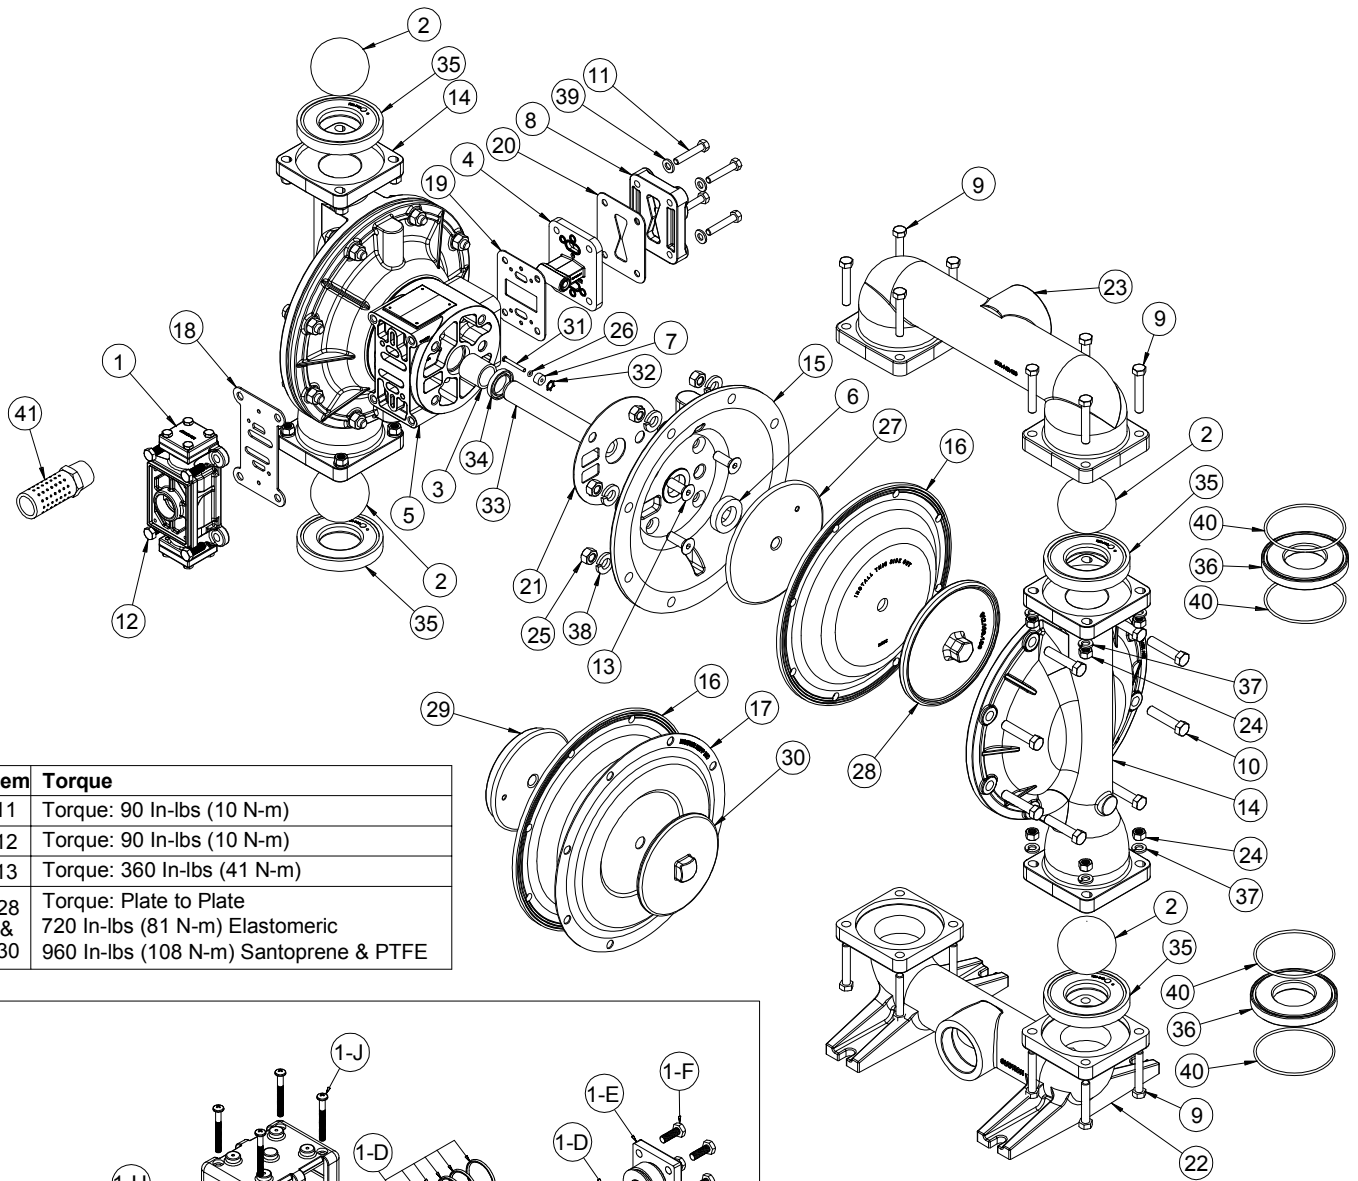

Item	Torque
11	Torque: 90 In-lbs (10 N-m)
12	Torque: 90 In-lbs (10 N-m)
13	Torque: 360 In-lbs (41 N-m)
28 & 30	Torque: Plate to Plate 720 In-lbs (81 N-m) Elastomeric 960 In-lbs (108 N-m) Santoprene & PTFE

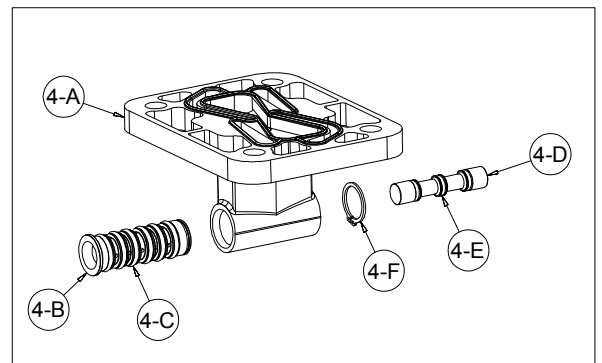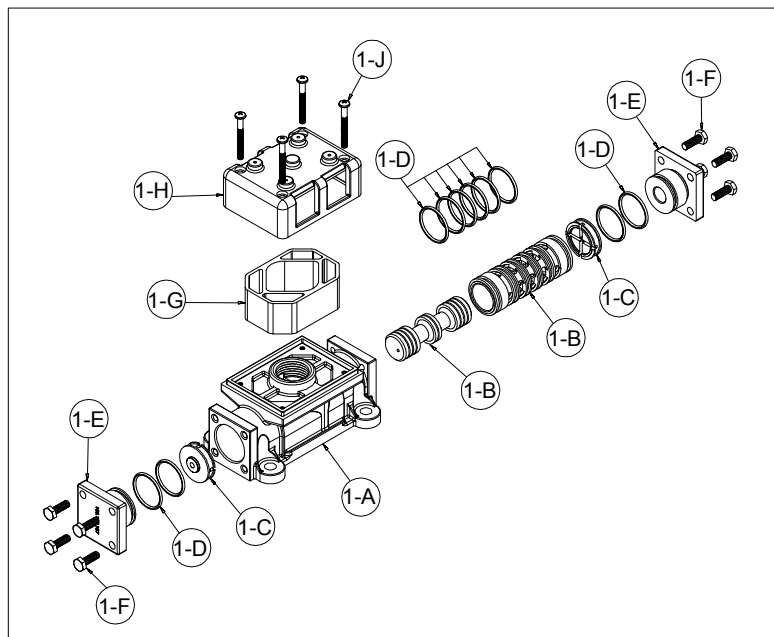

3: EXP VIEW

## EF20 Metallic Pump Parts List

S/N	Item	Part Number	Description	Qty	Mtl
1	1	EF031.173.000	Air Valve Assembly	1	Aluminum
2	1	EF031.183.000	Air Valve Assembly (No Muffler)	1	Aluminum
3	1-A	EF095.109.157	Body, Air Valve	1	Aluminum
4	1-B	EF031.139.000	Sleeve and Spool Set	1	Aluminum
5	1-C	EF132.029.357	Bumper	2	Polyurethane
6	1-D	EF560.020.360	O-Ring	10	Nitrile
7	1-E	EF165.127.157	Cap, End	2	Aluminum
8	1-F	EF170.032.330	Capscrew, Hx-Hd 1/4-20 x 0.75	8	Zinc Plated Steel
9	1-F	EF170.032.115	Capscrew, Hx-Hd 1/4-20 x 0.75	8	Stainless Steel
10	1-G	EF530.028.550	Muffler	1	PE
11	1-H	EF165.096.551	Muffler Cap	1	Glass Filled PP
12	1-J	EF706.026.330	Machine Screw	4	Zinc Plated Steel
13	1-J	EF706.026.115	Machine Screw	4	Stainless Steel
14	2	EF050.017.354	Ball, Check	4	Santoprene
15	2	EF050.017.356	Ball, Check	4	Hytre
16	2	EF050.017.360	Ball, Check	4	Nitrile
17	2	EF050.017.364	Ball, Check	4	EPDM
18	2	EF050.017.365	Ball, Check	4	Neoprene
19	2	EF050.018.600	Ball, Check	4	PTFE
20	3	EF070.006.170	Bushing	2	Bronze
21	4	EF095.110.000	Pilot Valve Assembly	1	Aluminum
22	4	EF095.110.558	Pilot Valve Assembly	1	Conductive HDPE
23	4-A	EF095.095.157	Valve Body	1	Aluminum
24	4-A	EF095.095.558	Valve Body	1	Conductive HDPE
25	4-B	EF755.052.000	Sleeve (With O-Rings)	1	Aluminum
26	4-C	EF560.033.360	O-Ring (Sleeve)	6	Nitrile
27	4-D	EF775.055.000	Spool (With O-Rings)	1	Stainless Steel
28	4-E	EF560.023.360	O-Ring (Spool)	3	Nitrile
29	4-F	EF675.037.080	Retaining Ring	1	Carbon Steel
30	5	EF114.024.157	Intermediate	1	Aluminum
31	6	EF132.035.360	Bumper, Diaphragm	2	Nitrile
32	7	EF135.034.506	Bushing, Actuator	2	POM
33	8	EF165.116.157	Cap, Air Inlet	1	Aluminum
34	9	EF170.052.330	Capscrew, Hx-Hd 3/8-16 x 2.25	16	Zinc Plated Steel
35	9	EF170.052.115	Capscrew, Hx-Hd 3/8-16 x 2.25	16	Stainless Steel
36	10	EF170.060.330	Capscrew, Hx-Hd 7/16-14 x 2.00	16	Zinc Plated Steel
37	10	EF170.060.115	Capscrew, Hx-Hd 7/16-14 x 2.00	16	Stainless Steel
38	11	EF170.069.330	Capscrew, Hx-Hd 5/16-18 x 1.75	4	Zinc Plated Steel
39	11	EF170.069.115	Capscrew, Hx-Hd 5/16-18 x 1.75	4	Stainless Steel
40	12	EF170.006.330	Capscrew, Hx-Hd 3/8-16 x 1.00	4	Zinc Plated Steel
41	12	EF170.006.115	Capscrew, Hx-Hd 3/8-16 x 1.00	4	Stainless Steel
42	13	EF171.059.330	Capscrew, Soc-Flat Hd 7/16-14 x 1.25	8	Zinc Plated Steel
43	13	EF171.059.115	Capscrew, Soc-Flat Hd 7/16-14 x 1.25	8	Stainless Steel
44	14	EF196.167.157	Chamber, Outer	2	Aluminum
45	14	EF196.167.010	Chamber, Outer	2	Cast Iron
46	14	EF196.167.110	Chamber, Outer	2	Stainless Steel
47	15	EF196.168.157	Chamber, Inner	2	Aluminum
48	16	EF286.007.354	Diaphragm	2	Santoprene
49	16	EF286.007.356	Diaphragm	2	Hytre
50	16	EF286.007.360	Diaphragm	2	Nitrile
51	16	EF286.007.363	Diaphragm	2	FKM
52	16	EF286.007.364	Diaphragm	2	EPDM
53	16	EF286.007.365	Diaphragm	2	Neoprene
54	17	EF286.020.604	Diaphragm, Overlay	2	PTFE
55	18	EF360.093.360	Gasket, Air Valve	1	Nitrile

S/N	Item	Part Number	Description	Qty	Mtl
56	19	EF360.114.360	Gasket, Pilot Valve	1	Nitrile
57	20	EF360.104.379	Gasket, Air Inlet	1	Conductive Nitrile
58	21	EF360.105.360	Gasket, Inner Chamber	2	Nitrile
59	22	EF518.145.156	Manifold, Suction, 2" NPT	1	Aluminum
60	22	EF518.145.156E	Manifold, Suction, 2" BSPT	1	Aluminum
61	22	EF518.145.010	Manifold, Suction, 2" NPT	1	Cast Iron
62	22	EF518.145.010E	Manifold, Suction, 2" BSPT	1	Cast Iron
63	22	EF518.145.110	Manifold, Suction, 2" NPT	1	Stainless Steel
64	22	EF518.145.110E	Manifold, Suction, 2" BSPT	1	Stainless Steel
65	23	EF518.146.156	Manifold, Discharge, 2" NPT	1	Aluminum
66	23	EF518.146.156E	Manifold, Discharge, 2" BSPT	1	Aluminum
67	23	EF518.146.010	Manifold, Discharge, 2" NPT	1	Cast Iron
68	23	EF518.146.010E	Manifold, Discharge, 2" BSPT	1	Cast Iron
69	23	EF518.146.110	Manifold, Discharge, 2" NPT	1	Stainless Steel
70	23	EF518.146.110E	Manifold, Discharge, 2" BSPT	1	Stainless Steel
71	24	EF545.005.330	Nut, Hex 3/8-16	16	Zinc Plated Steel
72	24	EF545.005.115	Nut, Hex 3/8-16	16	Stainless Steel
73	25	EF545.007.330	Nut, Hex 7/16-14	16	Zinc Plated Steel
74	25	EF545.007.115	Nut, Hex 7/16-14	16	Stainless Steel
75	26	EF560.001.360	O-Ring	2	Nitrile
76	27	EF612.192.157	Plate, Inner	2	Aluminum
77	27	EF612.192.010	Plate, Inner	2	Cast Iron
78	27	EF612.192.110	Plate, Inner	2	Stainless Steel
79	28	EF612.194.157	Plate, Outer	2	Aluminum
80	28	EF612.194.010	Plate, Outer	2	Cast Iron
81	28	EF612.194.110	Plate, Outer	2	Stainless Steel
82	29	EF612.195.157	Plate, Inner (Use With 286.020.604)	2	Aluminum
83	29	EF612.195.010	Plate, Inner (Use With 286.020.604)	2	Cast Iron
84	29	EF612.195.110	Plate, Inner (Use With 286.020.604)	2	Stainless Steel
85	30	EF612.039.157	Plate, Outer (Use With 286.020.604)	2	Aluminum
86	30	EF612.039.010	Plate, Outer (Use With 286.020.604)	2	Cast Iron
87	30	EF612.097.110	Plate, Outer (Use With 286.020.604)	2	Stainless Steel
88	31	EF620.020.115	Plunger, Actuator	2	Stainless Steel
89	32	EF675.042.115	Ring, Retainer	2	Stainless Steel
90	33	EF685.058.120	Rod, Diaphragm	1	Stainless Steel
91	34	EF720.004.360	U-Cup, Rod	2	Nitrile
92	35	EF722.040.354-Z	Seat, Check Ball	4	Santoprene
93	35	EF722.040.356-Z	Seat, Check Ball	4	Hytre
94	35	EF722.040.360	Seat, Check Ball	4	Nitrile
95	35	EF722.040.363	Seat, Check Ball	4	FKM
96	35	EF722.040.364	Seat, Check Ball	4	EPDM
97	35	EF722.040.365	Seat, Check Ball	4	Neoprene
98	35	EF722.040.550	Seat, Check Ball	4	PE
99	35	EF722.040.600	Seat, Check Ball	4	PTFE
100	36	EF722.040.110	Seat, Check Ball (Req 8 Qty Item 40)	4	Stainless Steel
101	36	EF722.040.150	Seat, Check Ball (Req 8 Qty Item 40)	4	Aluminum
102	37	EF900.005.330	Washer, Lock 3/8	16	Zinc Plated Steel
103	37	EF900.005.115	Washer, Lock 3/8	16	Stainless Steel
104	38	EF900.006.330	Washer, Lock 7/16	16	Zinc Plated Steel
105	38	EF900.006.115	Washer, Lock 7/16	16	Stainless Steel
106	39	EF901.038.330	Washer, Flat 5/16	4	Zinc Plated Steel
107	39	EF901.038.115	Washer, Flat 5/16	4	Stainless Steel
108	40	EF560.106.360	Seal, O-Ring (See Item 36)	8	Nitrile
109	40	EF720.060.600	Seal (See Item 36)	8	PTFE
110	40	EF720.060.608	Seal (See Item 36)	8	Conductive PTFE
111	41	EF530.033.000	Metal Muffler	1	Carbon Steel



# Certificate of Compliance

No. 3N221114.ECC82

Certificate's  
Holder:

Enviroflex Ltd.  
Pump Point, 21 Ascot Drive, DERBY, DE24 8GZ, United Kingdom

Certification  
ECM Mark:



Product:  
Model(s):

Air Operated Double Diaphragm Pump (Conductive)  
(see the following annex)

Verification to:

Standard:

BS EN IEC 60079-0:2018, BS EN ISO 80079-37:2016,  
BS EN IEC 60079-15:2019-TC

related to GBR Regulation:

Equipment and Protective Systems Intended for use in Potentially  
Explosive Atmospheres Regulations 2016

**Remark:** This document has been issued on a voluntary basis and upon request of the manufacturer. It is our opinion that the technical documentation received from the manufacturer is satisfactory for the requirements of the ECM Certification Mark. The conformity mark above can be affixed on the product(s) accordingly to ECM regulation about its release and its use. The regulation can be found at [www.entecerma.it](http://www.entecerma.it).

Additional information and clarification about the Marking:



The manufacturer is responsible for the UKCA Marking process, and if necessary, must refer to a Notified Body. This document has been issued on the basis of the regulation on ECM Voluntary Mark for the certification of products. RG01\_ECM available at: [www.entecerma.it](http://www.entecerma.it)

**Issuance date: 14 November 2022**

**Expiry date: 13 November 2027**

For online check:



Approver  
Ente Certificazione Macchine  
Legal Representative  
Luca Bedonni



**Ente Certificazione Macchine Srl**

Via Ca' Bella, 243 – Loc. Castello di Serravalle – 40053 Valsamoggia (BO) - ITALY  
☎ +39 051 6705141 📠 +39 051 6705156 ✉ [info@entecerma.it](mailto:info@entecerma.it) 🌐 [www.entecerma.it](http://www.entecerma.it)



# Annex I

No. 3N221114.ECC82

## Model(s):

EFG05 series, EFG1F series, EFG15 series, EFG20 series, EFG30 series;  
 EF05 metallic series, EF1F metallic series, EF15 metallic series, EF20 metallic series, EF30 metallic series;  
 EF02 non-metallic conductive series, EF05 non-metallic conductive series, EF07 non-metallic conductive series, EF10 non-metallic conductive series, EF1F non-metallic conductive series, EF15 non-metallic conductive series, EF20 non-metallic conductive series;  
 EF66605H series, EF66610X metallic series, EF66615X metallic series, EF6662XX metallic series, EF6663XX metallic series;  
 EFPD15 metallic series, EFPD20 metallic series, EFPD30 metallic series;  
 EFT02 series, EFT04 series, EFT08 series, EFT15 series;  
 EFE5 metallic series;  
 EFHDF10 series, EFHDF20 series, EFHDF30 series, EFHDF40 series;  
 EFL1F metallic series, EFL15 metallic series, EFL20 metallic series, EFL30 metallic series;  
 EFTA1 series, EFTA2 series, EFTA3 series;  
 EFT1F food series, EFT15 food series, EFT20 food series, EFT30 food series;  
 EFF2 hygienic series, EFF4 hygienic series, EFF8 hygienic series, EFF15 hygienic series

## Marking:

-  II 2G c T5
-  II 2D c T100°C
-  II 2 G Ex h IIB T4...T3 Gb