


Model:EFT15

Assembly, Installation and Operation Manual



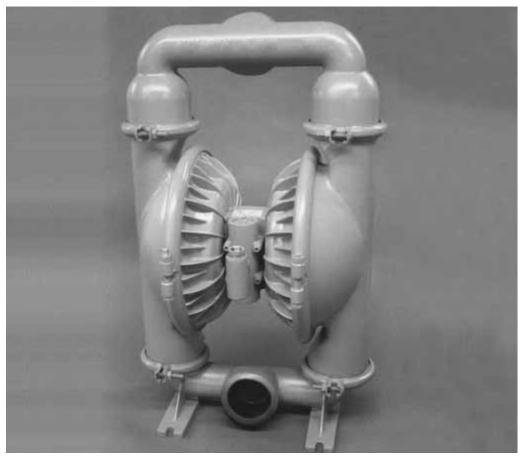

Enviroflex Ltd

Pump Point, 21 Ascot Drive, DERBY, DE24 8GZ, United Kingdom www.enviroflexpumps.com

EF PUMP DESIGNATION SYSTEM

EFT15 / XXXXXX / XXX / XXX / XXX / XXXX / XXXX 0-RINGS MODEL **VALVE SEAT** SPECIALTY VALVE BALLS CODE DIAPHRAGMS (if applicable) **AIR VALVE CENTER BLOCK AIR CHAMBERS** WETTED PARTS & OUTER PISTON **MATERIAL CODES** MODEL DIAPHRAGMS VALVE BALL EFT15 = 76 MM (3")XBS = CONDUCTIVE BUNA-N BN = BUNA-N (Red Dot)

WETTED PARTS & OUTER PISTON

AA = ALUMINUM / ALUMINUM WW = CAST IRON / CAST IRON

AIR CHAMBERS

A = ALUMINUM

CENTER BLOCK

- A = ALUMINUM
- P = POLYPROPYLENE

AIR VALVE

B = BRASS

- (Two Red Dots)
- BNS = BUNA-N (Red Dot)
- FSS = SANIFLEX
- [Hytrel (Cream)]
- EPS = EPDM (Blue Dot)
- NES = NEOPRENE (Green Dot)
- PUS = POLYURETHANE (Clear)
- TEU = PTFE W/EPDM
- BACK-UP (White)
- TNU = PTFE W/NEOPRENE BACK-UP (White)
- TSU = PTFE W/SANIFLEX BACK-UP (White)
- BNU = BUNA-N, ULTRA-FLEX
- EPU = EPDM, ULTRA-FLEX
- NEU = NEOPRENE, ULTRA-FLEX
- VTU = VITON, ULTRA-FLEX
- VTS = VITON (White Dot)
- WFS = SANTOPRENE (Orange Dot)

1

- FS = SANIFLEX
- [Hytrel (Cream)]
- EP = EPDM (Blue Dot)
- NE = NEOPRENE (Green Dot)
- PU = POLYURETHANE (Brown)
- TF = PTFE (White)
- VT = VITON (White Dot)
- WF = SANTOPRENE (Orange Dot)]

VALVE SEAT

- A = ALUMINUM
- BN = BUNA-N (Red Dot)
- FS = SANIFLEX
 - [Hytrel (Cream)]
- H = ALLOY C
- M = MILD STEEL
- EP = EPDM (Blue Dot)
- NE = NEOPRENE (Green Dot)
- PU = POLYURETHANE (Brown)
- S = STAINLESS STEEL
- VT = VITON (White Dot)
- WF = SANTOPRENE (Orange Dot)]

Valve seat o-ring required.

VALVE SEAT O-RING

- FS = FLUORO-SEAL
- TF = PTFE (White)

SPECIALTY CODES

0014 BSPT



THE EF PUMP - HOW IT WORKS

The diaphragm pump is an air-operated, positive displacement, self-priming pump. These drawings show the flow pattern through the pump upon its initial stroke. It is assumed the pump has no fluid in it prior to its initial stroke.

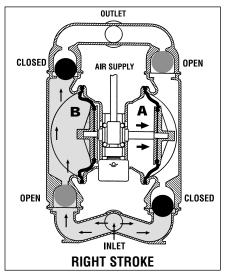
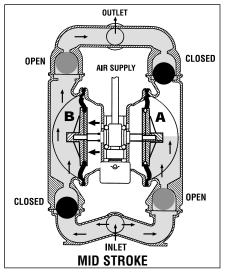
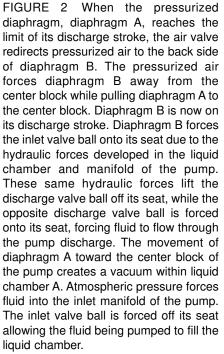


FIGURE 1 The air valve directs pressurized air to the back side of diaphragm A. The compressed air is applied directly to the liquid column separated by elastomeric diaphragms. The diaphragm acts as a separation membrane between the compressed air and liquid, balancing the load and removing mechanical stress from the diaphragm. The compressed air moves the diaphragm away from the center block of the pump. The opposite diaphragm is pulled in by the shaft connected to the pressurized diaphragm. Diaphragm B is on its suction stroke; air behind the diaphragm has been forced out to the atmosphere through the exhaust port of the pump. The movement of diaphragm B toward the center block of the pump creates a vacuum within chamber B. Atmospheric pressure forces fluid into the inlet manifold forcing the inlet valve ball off its seat. Liquid is free to move past the inlet valve ball and fill the liquid chamber (see shaded area).





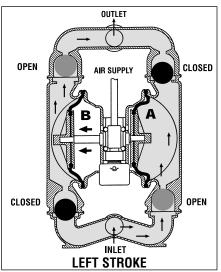


FIGURE 3 At completion of the stroke, the air valve again redirects air to the back side of diaphragm A, which starts diaphragm B on its exhaust stroke. As the pump reaches its original starting point, each diaphragm has gone through one exhaust and one discharge stroke. This constitutes one complete pumping cycle. The pump may take several cycles to completely prime depending on the conditions of the application.



MODEL EFT15 METAL CAUTIONS - READ FIRST

TEMPERATURE LIMITS:

Polypropylene	0°C to	79°C	$32^{\circ}F$ to $175^{\circ}F$	
Neoprene	–17.8°C to	93.3°C	0°F to 200°F	
Buna-N	-12.2°C to	82.2°C	10°F to 180°F	
EPDM	–51.1°C to	137.8°C-	-60°F to 280°F	
Viton	–40°C to	176.7°C	–40°F to 350°F	
Santoprene	–40°C to	107.2°C	–40°F to 225°F	
Polyurethane	-12.2°C to	65.6°C	10°F to 150°F	
Hytrel	–28.9°C to	104.4°C-	-20°F to 220°F	
PTFE	4.4°C to	148.9°C	40°F to 300°F	



CAUTION: When choosing pump materials, be sure to Deck the temperature limits for all wetted components. Example: Viton has a maximum limit of 176.7°C (350°F) but polypropylene has a maximum limit of only 79°C (175°F).



CAUTION: Maximum temperature limits are based upon mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperatures. Consult engineering guide for chemical compatibility and temperature limits.

CAUTION: Always wear safety glasses when operating pump. If diaphragm rupture occurs, material being pumped may be forced out air exhaust.

WARNING: Prevention of static sparking - If static sparking occurs, fire or explosion could result. Pump, valves, and containers must be properly grounded when handling flammable fluids and whenever discharge of static electricity is a hazard.



CAUTION: Do not exceed 8.6 Bar (125 psig) air supply pressure. (3.4 Bar [50 psig] for UL models.)



CAUTION: Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from pump. Disconnect all intake, discharge and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container.



CAUTION: Blow out air line for 10 to 20 seconds before attaching to pump to make sure all pipe line debris is clear. Use an in-line air filter. A 5µ (micron) air filter is recommended.



installation. Fittings may loosen during transportation. NOTE: When installing Teflon diaphragms, it is important to tighten outer pistons simultaneously (turn-

NOTE: Tighten clamp bands and retainers prior to

ing in opposite directions) to ensure tight fit. NOTE: Before starting disassembly, mark a line from 0 each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly.



CAUTION: Verify the chemical compatibility of the process and cleaning fluid to the pump's component materials in the Chemical Resistance Guide.




CAUTION: When removing the end cap using compressed air, the air valve end cap may come out with considerable force. Hand protection such as a padded glove or rag should be used to capture the end cap.



•

CAUTION: Only explosion proof (NEMA 7) solenoid valves should be used in areas where explosion proof equipment is required.



NOTE: UL-listed pumps must not exceed 3.4 Bar (50 psig) air supply pressure.



θ

CAUTION: Do not lubricate lube-free pumps.






Performance	
	EFT15

Height
Hastelloy 110.3 kg (218 lbs.)
Air Inlet19.1 mm (¾")
Inlet7.62 cm (3")
Outlet
Suction Lift
9.45 m Wet (31')
Displacement per
Stroke 5.3 I (1.40 gal.)
Max. Flow Rate
Max. Size Solids
Displacement per stroke was calculated at 4.8 Bar (70 psig) air inlet pressure against a 2 Bar (30 psig) head pressure.


Example: To pump 530 lpm (140 gpm) against a discharge pressure head of 2.1 Bar (30 psig) requires 4.1 Bar (60 psig) and 136 Nm³/h (80 scfm) air consumption. (See dot on chart.)

Caution: Do not exceed 8.6 Bar (125 psig) air supply pressure.

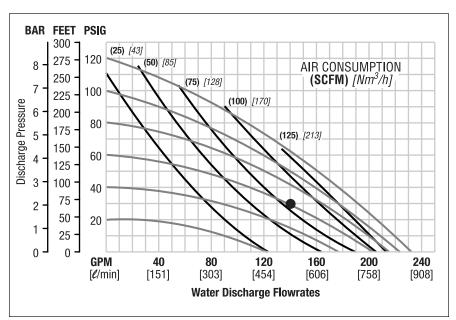

Flow rates indicated on chart were determined by pumping water.


For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.

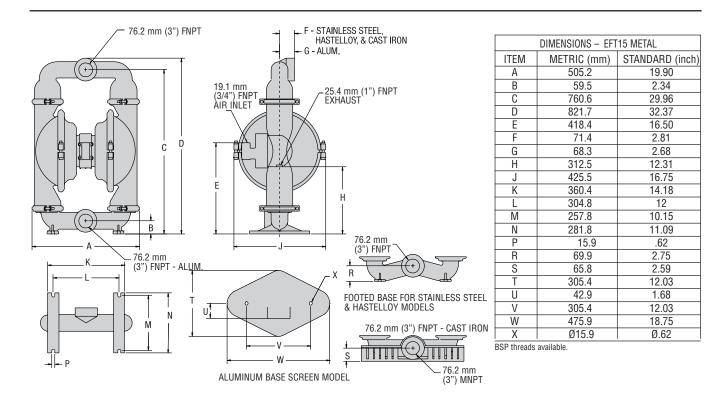

Dimensional Drawings for EFT15 Pumps



SUGGESTED INSTALLATION

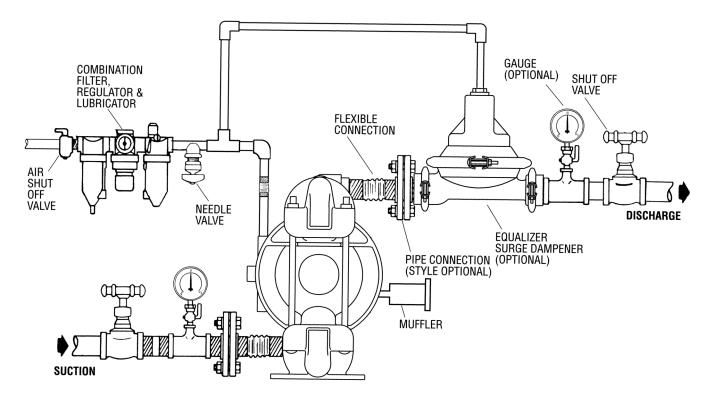

NOTE: In the event of a power failure, the shutoff valve should be closed, if the restarting of the pump is not desirable once power is regained.

AIR OPERATED PUMPS: To stop the pump from operating in an emergency situation, simply close the "shut-off" valve (user supplied) installed in the air supply line. A properly functioning valve will stop the air supply to the pump, therefore stopping output. This "shut-off" valve should be located far enough away from the pumping equipment such that it can be reached safely in an emergency situation.

SUGGESTED OPERATION AND MAINTENANCE INSTRUCTIONS


OPERATION: Pump discharge rate can be controlled by limiting the volume and/or pressure of the air supply to the pump (preferred method). An air regulator is used to regulate air pressure. A needle valve is used to regulate volume. Pump discharge rate can also be controlled by throttling the pump discharge by partially closing a valve in the discharge line of the pump. This action increases friction loss which reduces flow rate. This is useful when the need exists to control the pump from a remote location. When the pump discharge pressure equals or exceeds the air supply pressure, the pump will stop; no bypass or pressure relief valve is needed, and pump damage will not occur. The pump has reached a "deadhead" situation and can be restarted by reducing the fluid discharge pressure or increasing the air inlet pressure. The Enviroflex EFT15 pump runs solely on compressed air and does not generate heat, therefore your process fluid temperature will not be affected.

RECORDS: When service is required, a record should be made of all necessary repairs and replacements. Over a period of time, such records can become a valuable tool for predicting and preventing future maintenance problems and unscheduled downtime. In addition, accurate records make it possible to identify pumps that are poorly suited to their applications.

MAINTENANCE AND INSPECTIONS: Since each application is unique, maintenance schedules may be different for every pump. Frequency of use, line pressure, viscosity and abrasiveness of process fluid all affect the parts life of a EF pump. Periodic inspections have been found to offer the best means for preventing unscheduled pump downtime. Personnel familiar with the pump's construction and service should be informed of any abnormalities that are detected during operation.



EXPLODED VIEWS FOR EFT15 PUMPS

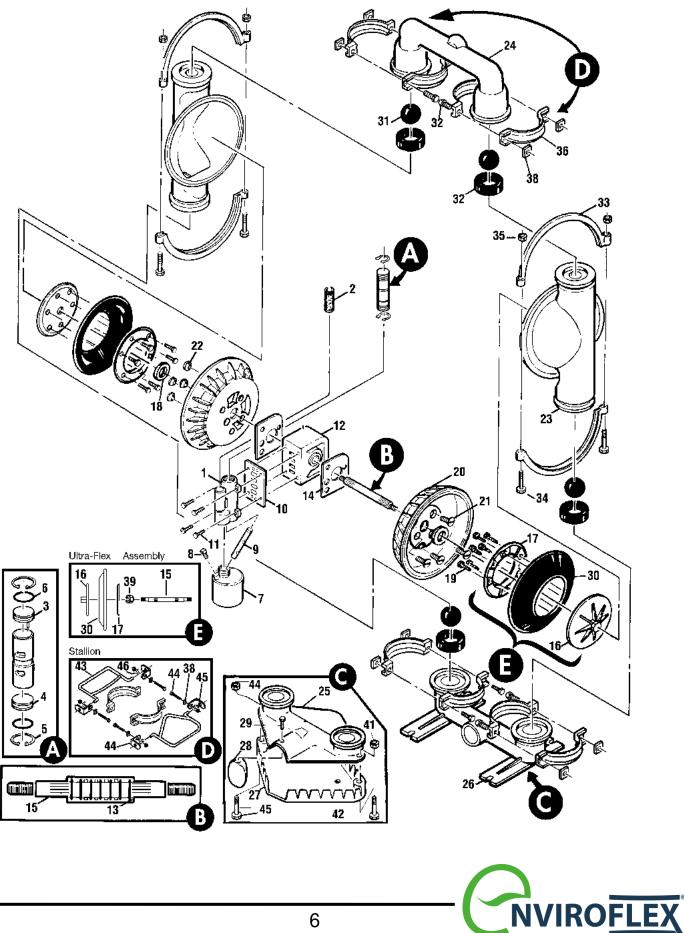

EFT15 Parts List

Item	EFT15/AAAB Part Number	EFT15/AAAB Mtl	Description	Qty
1	EF15-2000-07	Brass	Air Valve Assembly	1
2	EF08-2500-07	Brass	Air Valve Screen	
3	EF15-2300-23	Nylon	Air Valve End Cap with Guide (Top)	1
4	EF15-2330-23	Nylon	Air Valve End Cap without Guide (Bottom)	1
5	EF15-2650-03	Stainless steel	Air Valve Snap Ring	2
6	EF15-2390-52	Buna-N	Air Valve Cap O-Ring	2
7	EF15-2850-01	Aluminum	Oil Bottle (Optional)	1
8	EF15-7000-07	Brass	Plug (Optional) 3/8"	1
9	EF15-2900-99	/	Capillary Rod (Optional)	1
10	EF15-2600-52	Buna-N	Air Valve Gasket — Buna-N	1
11	EF08-6000-08	Alloy steel	Air Valve Screw 5/16"-18 x 2-1/4"	4
12	EF15-3100-01-225	Aluminum	Center Block	1
13	EF15-3210-55-225	PTFE	Center Block Glyd Ring	7
14	EF15-3520-52	Buna-N	Block Gasket — Buna-N	2
15	EF15-3800-09-07	Mild steel, chrome	Shaft	1
16	EF15-4550-01	Aluminum	Piston, Outer	2
	EF15-4560-01	Aluminum	Piston, Outer, Ultra-Flex	2
17	EF15-3700-01	Aluminum	Piston, Inner	2
	EF15-3760-08	Alloy steel	Piston, Inner, Ultra-Flex	2
18	EF15-6850-08	Alloy steel	Washer, Inner Piston Back-up	2
19	EF15-6130-08	Alloy steel	Piston Assembly — Bolt2 3/8"-16 x 11/8"	12
	EF15-6720-08	Alloy steel	Washer, Flat (Not shown)	12
20	EF15-3650-01	Aluminum	Air Chamber	2
21	EF15-6200-08	Alloy steel	Air Chamber Screw 3/8"-16 x 4"	4
22	EF08-6550-08	Alloy steel	Air Chamber Cone Nut 3/8"-16	4
23	EF15-5000-01	Aluminum	Liquid Chamber	2
24	EF15-5020-01	Aluminum	Discharge Manifold	1
25	N/R	1	Inlet Housing — Screened	1
26	EF15-5080-01	Aluminum	Inlet Housing for Footed Base	
27	N/R	1	Screen (for P/N EF15-5080-01-30 & EF15-5080-01-33	1
28	N/R	1	Suction Hook-up Cover	
29	N/R	1	Hex Head Machine Screw 3/8"-16 x 7/8"	
30	EF15-1010-50	Polyurethane	Diaphragm	2
	EF15-1010-51	Neoprene	Diaphragm	2
	EF15-1010-52	Buna-N	Diaphragm	2
	EF15-1010-53	Viton	Diaphragm	2
	EF15-1010-54	EPDM	Diaphragm	2
	EF15-1010-55	PTFE	Diaphragm	2
	EF15-1010-56	Hytrel	Diaphragm	2
	EF15-1010-58	Santoprene	Diaphragm	2
31	EF15-1080-50	Polyurethane	Valve Ball	4
	EF15-1080-51	Neoprene	Valve Ball	4
	EF15-1080-52	Buna-N	Valve Ball	4
	EF15-1080-53	Viton	Valve Ball	4
	EF15-1080-54	EPDM	Valve Ball	4
	EF15-1080-55	PTFE	Valve Ball	4
	EF15-1080-56	Hytrel	Valve Ball	4



	EF15-1080-58	Santoprene	Valve Ball	4
32	EF15-1120-50	Polyurethane	Valve Seat	4
	EF15-1120-51	Neoprene	Valve Seat	4
	EF15-1120-52	Buna-N	Valve Seat	4
	EF15-1120-53	Viton	Valve Seat	4
	EF15-1120-54	EPDM	Valve Seat	4
	EF15-1120-56	Hytrel	Valve Seat	4
	EF15-1120-58	Santoprene	Valve Seat	4
33	EF15-7300-08	Alloy steel	Large Clamp Band Assy.	2
34	EF15-6120-08	Alloy steel	Large Carriage Bolt 1/2"-13 x 31/2"	4
35	EF15-6420-08	Alloy steel	Large Hex Nut 1/2"-13	4
36	EF15-7100-08	Alloy steel	Small Clamp Band Assy.	4
37	EF15-6050-08	Alloy steel	Small Carriage Bolt 3/8"-16 x 2"	8
38	EF08-6450-08	Alloy steel	Small Hex Nut 3/8"-16	8
	EF15-3510-99	/	Muffler (not shown)	1
39	N/R	/	Stallion Ultra-Flex Spacer	2
40	N/R	/	Check Body (not shown)	1
	N/R	/	Nipple 1" x Close (not shown)	1
	N/R	/	Check Ball (not shown)	1
41	N/R	/	Hex Nut 3/8"-16	2
42	N/R	/	Hex Head Machine Screw 3/8"-16 x 3"	2
	N/R	/	Hex Head Machine Screw 3/8"-16 x 3" Stallion	3
43	N/R	/	Handle, Collapsible	2
44	N/R	/	Bracket, Handle	4
45	N/R	/	Small Hex Nut 3/8"-16	4
46	N/R	/	Washer, Flat	4



Certificate of Compliance



No. 3N221114.ECC82

Certificate's Enviroflex Ltd. Pump Point, 21 Ascot Drive, DERBY, DE24 8GZ, United Kingdom Holder: Certification ECM Mark: Type Approved Product: Air Operated Double Diaphragm Pump (Conductive) (see the following annex) Model(s): Verification to: Standard: BS EN IEC 60079-0:2018, BS EN ISO 80079-37:2016, BS EN IEC 60079-15:2019-TC related to GBR Regulation: Equipment and Protective Systems Intended for use in Potentially **Explosive Atmospheres Regulations 2016** Remark: This document has been issued on a voluntary basis and upon request of the manufacturer. It is our opinion that the technical documentation received from the manufacturer is satisfactory for the requirements of the ECM Certification Mark. The conformity mark above can be affixed on the product(s) accordingly to ECM regulation about its release and its use. The regulation can be found at www.entecerma.it. Additional information and clarification about the Marking: The manufacturer is responsible for the UKCA Marking process, and if necessary, must UK refer to a Notified Body. This document has been issued on the basis of the regulation CA on ECM Voluntary Mark for the certification of products. RG01_ECM available at: www.entecerma.it Issuance date: 14 November 2022 Expiry date: 13 November 2027 For online check: Approver Ente Certificazione Macchine Legal Representative Luca Bedonni



Ente Certificazione Macchine Srl

Annex I

No. 3N221114.ECC82



Model(s):

EFG05 series, EFG1F series, EFG15 series, EFG20 series, EFG30 series; EF05 metallic series, EF1F metallic series, EF15 metallic series, EF20 metallic series, EF30 metallic series: EF02 non-metallic conductive series, EF05 non-metallic conductive series, EF07 non-metallic conductive series, EF10 non-metallic conductive series, EF1F non-metallic conductive series, EF15 non-metallic conductive series, EF20 non-metallic conductive series; EF66605H series, EF66610X metallic series, EF66615X metallic series, EF6662XX metallic series, EF6663XX metallic series; EFPD15 metallic series, EFPD20 metallic series, EFPD30 metallic series; EFT02 series, EFT04 series, EFT08 series, EFT15 series; EFE5 metallic series; EFHDF10 series, EFHDF20 series, EFHDF30 series, EFHDF40 series; EFL1F metallic series, EFL15 metallic series, EFL20 metallic series, EFL30 metallic series; EFTA1 series, EFTA2 series, EFTA3 series; EFT1F food series, EFT15 food series, EFT20 food series, EFT30 food series; EFF2 hygienic series, EFF4 hygienic series, EFF8 hygienic series, EFF15 hygienic series Marking:

II 2G c T5
II 2D c T100°C
II 2 G Ex h IIB T4...T3 Gb